


Replacing Your Broken Snap

- ☞ Remove the old snap with bolt cutters or similar means. Do not cut the rope. Do not pull the rope apart.

Note: When removing and/or replacing the snap, you may have to spread the loop end of the rope slightly to take the old snap off and also to get the new replacement snap on.

- ☞ Using a Phillips head screw driver, remove the screw on the side of the snap. (Figure

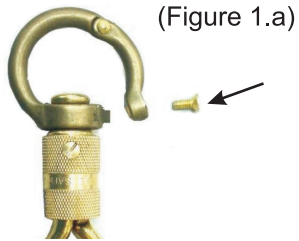

- ☞ Take the new snap and slide the open end through the “eye” in the rope.
- ☞ Once the snap is threaded through the eye of the rope, you are ready to tighten the snap closed.
- ☞ Using a Phillips head screw driver, tighten the screw supplied with the snap.
- ☞ Your rope is now ready to use.